


The A23 battery has a shelf life of about 1 year. The product fully complies with Part 15 of the FCC Regulations.

1B - Technical Specifications

Operating frequency	318 MHz
Number of buttons	1 plus flashlight
Battery:	1 ea. 12V A23
Operating temperature:	-20°F – 100°F
Overall dimensions:	1/2" x 1-7/8" x 1-1/2"
Weight:	1 oz.

1C - Main components

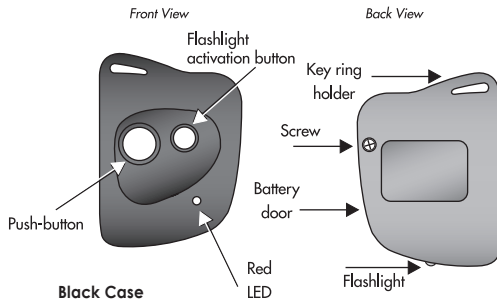

Manual - 318 1 Button

Transmitter
Solutions

*Firefly*TM
TRANSMITTER

with Flashlight



*Thank you for choosing a Transmitter Solutions product.
Please read this manual carefully before using the product.*

Made in China. Copyright © 2010 by Transmitter Solutions.

CONTENTS

1 - TRANSMITTER OVERVIEW

- 1A - General information
- 1B - Technical specifications
- 1C - Main components

2 - CODING

3 - OPERATION

4 - BATTERY ACCESS

5 - TROUBLESHOOTING

1A - General information

The Transmitter Solutions - FireflyTM Transmitter is a very small (1/2" x 1-7/8" x 1-1/2") key chain style wireless transmitter operating at 318 MHz. The FireflyTM achieves its small size by using state-of-the-art, surface mount components. It has been designed for use with and is compatible with all dip switch receivers operating at a 318 frequency, including all Allstar[®] Model 9931 and Heddolf[®] P220 9-dip switch digital receivers.

Allstar and Heddolf are registered trademarks owned by Allstar Corporation and Heddolf respectively.

2 - CODING

Set the nine-digit toggle code switch to match the code set in the receiver. Access to the Firefly™'s toggle code switch is achieved by removal of the back cover and battery (if necessary). Move switches using a small pointed object, such as a paper clip, gently switching the small switches to either the +, -, or neutral position. (In Detail below, switches 1 and 3 are in the + position, switches 2, 4, 7 and 9 are in the - position, and switches 5, 6 and 8 are in the neutral position.) When complete, reinstall battery and replace back cover inserting bottom clip into front groove, then replace and tighten screw.

3- OPERATION

Once the codes are set to match the receiver codes, you may test the system. Ensure the gate or door is visible and clear before testing.

Step 1. Push the Firefly™'s button from a distance of about ten feet. If the receiver activates, the switches are properly matched.


 
Step 2. Test the transmitter from several locations to discover any "blind spots" caused by interference.

Flashlight is activated by pressing the smaller button.

4 - BATTERY ACCESS

Remove set screw and open case from back. Attend to proper polarity when installing or replacing battery. See "coding" for proper removal and replacement of back cover.

5 - TROUBLESHOOTING

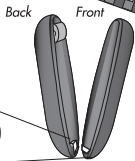

Transmitter Solutions Firefly™-Type: TRAFIRL318ALD21K

FCC ID : SU7L318ALD21K

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept interference received, including interference that may cause undesired operation.

Notice

Any changes or modifications to Transmitter Solutions equipment not expressly approved by Transmitter Solutions could void the manufacturer's warranty and could void the user's authority to operate the equipment.

WARRANTY

The warranty period of Transmitter Solutions Firefly™ transmitters is 24 months, beginning from the manufacturing date of the transmitter. During this period, if the product does not operate correctly, due to a defective component, the product will be repaired or replaced at the sole discretion of Transmitter Solutions. The warranty does not extend to the transmitter case which can be damaged by conditions outside the control of Transmitter Solutions, or to battery life.

PROBLEM

The system does not receive the transmitter signal.
The transmitter LED will not light.

The system does not receive the transmitter signal.
The transmitter LED is ON.

The operating range is reduced.

SOLUTION

- Ensure clear plastic battery insulator has been removed; OR
- Replace the transmitter battery.

Check to ensure the transmitter switches are coded to match your system receiver.

Replace the transmitter battery.

Transmitter
SOLUTIONS®

7380 S. Eastern Avenue, Suite 124-320 • Las Vegas, NV 89123
(866) 975-0101 * (866) 975-0404 Fax
www.transmittersolutions.com